

Image Not Yet Available

TONNEAU COVER STICKS 1967-79 (PAIR)

A pair of tonneau cover sticks are essential equipment for the fitment of a full tonneau cover to your 1275cc or 1500cc Midget/Sprite, supporting the tonneau cover and folding it down in a neat, straight line behind the seats when the car is in use. A very simple but effective design.

Manufactured exactly to the original MG design and finished correctly in the same shade of grey paint as used on 1960s Midget and Sprite hood frames, the tonneau cover sticks slot into brackets located on the main hood pivot mounting points when in use. These brackets were not fitted as standard by MG - they were only fitted if customers bought a tonneau cover or hardtop. If your car doesn't have them, they are available, each, by ordering part number AHA8082.

When the tonneau cover is not in use, the sticks stow in their own protective bag (available separately - see recommendation below) in the boot.



Easy to fit. The two half sticks simply slide together and then slot into the brackets in the car. The tonneau cover can then be attached to the car and the front half folded down over the sticks, securing to the Lift the Dot pegs behind the seats.



No tools required.


MORE GREAT RECOMMENDATIONS:



**TONNEAU COVER STICKS
BAG**



FABSIL WATER REPELLANT

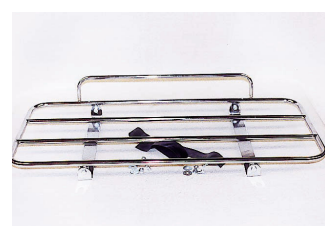

**CHROME BOLT ON
BOOT RACK MGB & MGC**