




SEAT FOAM BACK MIDGET 1970-79

Exact reproduction of the original seat foam back (squab) as used in seats in Midgets and Sprites built between 1970 and 1979, incorporating the distinctive lumbar and side bolster profiles of those seats.

The Midget and Sprite seat foam back is not handed and will therefore fit either of the front seats. It features different grades of foam bonded together to facilitate the correct original fitment.

An absolute must when reupholstering seats with new Club covers - tired, compressed old seat foams would simply not do them justice and would fail to offer the correct support for the seats' occupants. Additionally, new foams exactly match the profile of new seat covers, holding them smartly taut and making the job of seat reupholstery that much easier.

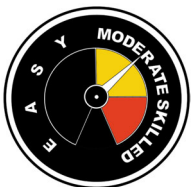

Moderate skills required. Seat cover centre panel needs to be attached to foam centre to get the right bolster contours - this requires patience and a bit of upholstery adhesive. If you're put off, remember our exchange leather seat service, guaranteeing you the professional finish without the worry.



Basic hand tools required. Upholstery adhesive for attaching the seat cover centre panels to the foam base.

MORE GREAT RECOMMENDATIONS:



**SEAT FOAM BASE
MIDGET 1970-79**



**SEAT DIAPHRAGM
MIDGET**



**SEAT BACKBOARD
MIDGET**