




SUPPLEMENTARY PANEL SET MIDGET & SPRITE 1970 ON

Original style panel set created for use in addition to the Midget & Sprite luxury six piece Club panel set, if complete interior replacement is required (for example an interior colour scheme change or a full restoration).

Seven piece panel set includes pair of inner footwell panels, pair of sill panels, choice of high or low tunnel panel and rear cockpit panel. Available in a choice of eight colours exactly complementing the Club panel set range.

Also included in the supplementary panel set is sufficient matching vinyl to use on 'B' posts, door cappings, fascia crash rail and behind the joints between the inner footwell panels and the tunnel panel. In short, absolutely everything you need to complete a smart new custom interior for your Midget or Sprite.

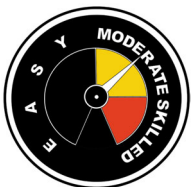

Moderate skills required. Clips plus pop rivets secure rear cockpit panel; screws and cup washers used on all other panels. Material for 'B' posts, cappings, etc. fitted with upholstery adhesive - patience is required to get these looking right.

FITTING INSTRUCTIONS



Basic hand tools required. Cross-head screw driver set, plus bradawl to pierce screw holes in panels. Small hand drill required if new screw holes are required in body. A pair of upholstery pliers would be helpful in pulling glued vinyl taut over the crash rail and door cappings.

MORE GREAT RECOMMENDATIONS:



**TRIM ADHESIVE
TIN OR AEROSOL**



**LEATHER SEAT COVERS
MIDGET & SPRITE**



**CLUB CARPET SET
MIDGET & SPRITE**